


# Slab outlet Flush with carpet or other 1/4" flooring

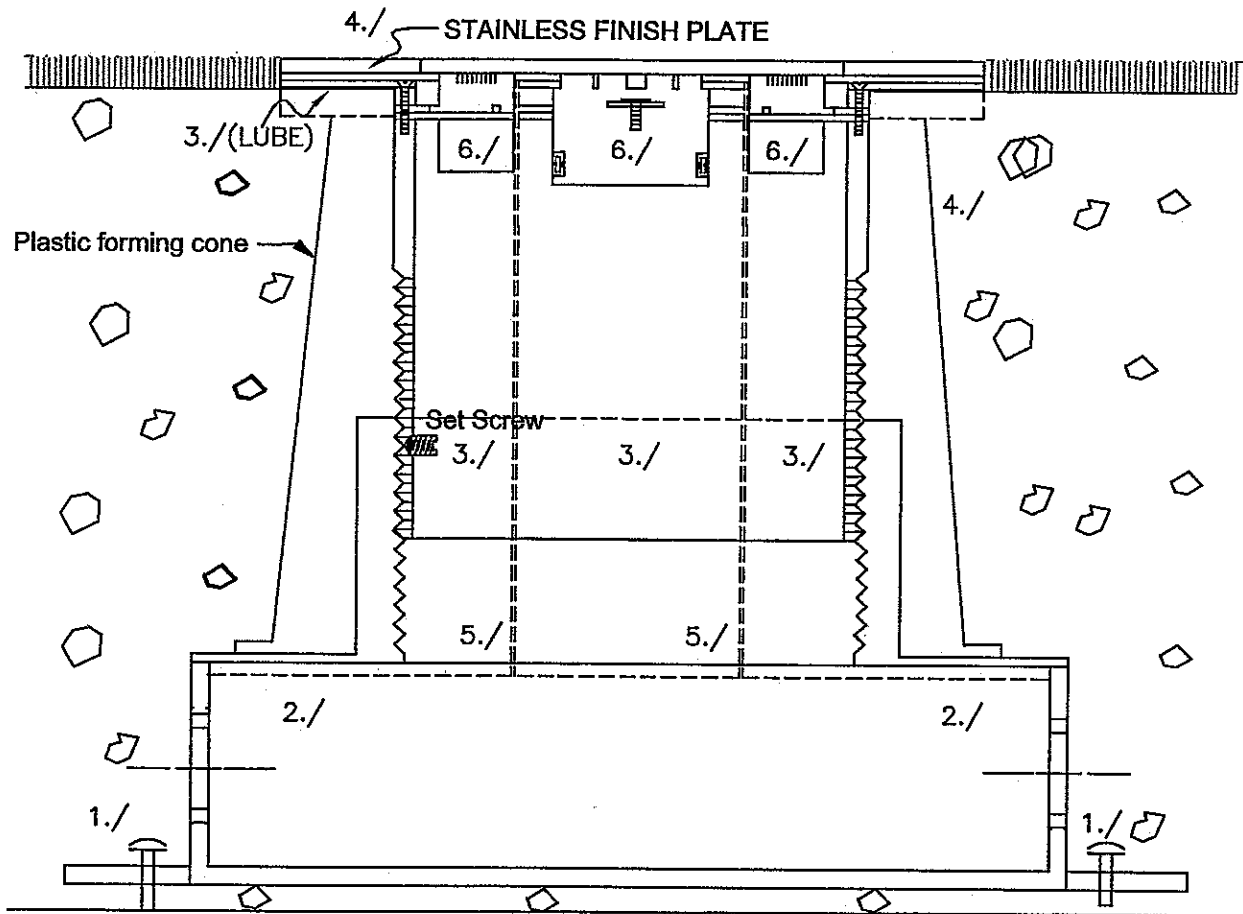

## INSTALLATION PROCEDURE FOR FLUSH (MOI-SLB-\_) FLOOR OUTLETS INSTALLED IN POURED CONCRETE UTILIZING CONCRETE-TIGHT SLAB BOX.

- 1./ LEVEL THE SLAB BOX OUTLET ASSEMBLY ENSURING THE TOP OF THE PLASTIC PLATE WILL BE FLUSH WITH CONCRETE FLOOR FINISH.
- 2./ REMOVE BOX COVER PLATE WITH OUTLET ASSEMBLY AND CONNECT CONDUITS THROUGH THE KNOCKOUTS IN THE BOX.
- 3./ PULL WIRE (OR AT LEAST A PULL STRING) INTO OR THROUGH THE BOX LEAVING TAILS OR A LOOP FOR POWER CONNECTION. REPLACE SLAB BOX COVER INCLUDING OUTLET ASSEMBLY. (APPLY WIRE LUBE OR GREASE UNDER FLANGE PLATE AND ON THE EDGE PLASTIC PLATE PRIOR TO POUR).
- 4./ ONCE THE CONCRETE HAS HARDENED, REMOVE THE PLASTIC COVER. IF REQUIRED, THREAD OUT TO DESIRED FINISH FLOOR LEVEL. (CARPET OR OTHER FLOOR FINISH IS TO BUTT UP TO EDGE OF S.S. FINISH COVER FOR A FLUSH INSTALLATION). LOCK IN PLACE WITH HEX HEAD SET SCREW.
- 5./ CUT DIVIDER PLATES TO CORRECT LENGTH (ROTATE OUTLET TO ENSURE DIVIDER PLATES ARE AT 90 DEGREES TO THE DIVIDER PLATE INSIDE THE BOX), THEN SLIDE DIVIDERS INTO PLACE.
- 6./ INSTALL KEYSTONE STYLE JACKS, RECEPTACLE AND S.S. FINISH PLATE. (JACK(S) AND RECEPTACLE(S) PER JOB REQUIREMENT).

If there are any questions regarding installation, please call 1-800-678-4085

**MULTICONNECT™** FROM: **NOCOM®**

105 WILLOWLEA ROAD,  
OTTAWA ONT., CANADA  
K0A-1L0  
TEL.(613) 831-8102 FAX(613) 831-8103  
TOLL FREE 1-888-225-2478 e-mail info@nocom.ca  
web www.multiconnect.ca

JOB TITLE:

DRAWN BY:  
TJP

APPROVED:  
R.B.

DWG #  
SLAB CROSS-SECTION  
sheet 4 of 5  
issue-R1

DATE:  
04-02-18

SCALE:  
N.T.S.